

How to connect the battery backup (BATTBACK) to a Nowa 360

Procedure

1. Connect the wire labeled « **Contrôleur** » to the valve controller. The black wire must be in the left hole and the red wire must be in the right hole in the "**Valve 1**" terminal block
2. Connect the wire labeled "**Valve**" to the valve. The wires are bare. You will therefore have to join them together using a marette or electrical tape
3. Plug the power supply into an outlet
4. Connect the wires for the battery inside the metal box, respecting the colors (red wire on red terminal, black wire on black terminal)
5. Test the valve by pressing "**open valve**". The valve should open.
6. Wait 1 minute then press "**close valve**". The valve should close completely

