

Nowa 360


How to remove a sensor

Context

When a detector is configured, it is always possible to delete it if you wish. You can delete a sensor by following this procedure:

Round and triangle sensor

1. Connect to your system using your mobile app and installer access (**installer:3275**)
2. Once connected to the system, press the three white lines at the top left to access the menu
3. Press on « **Settings** »
4. Once the parameter page is loaded, you will already be on the sensor configuration page
5. Select a sensor to remove using the drop-down list located under « **Select a sensor to configure** ».
6. When selected, click on « **Remove** » (e.g., **A**)
7. A dialog box will open, asking you to confirm the suppression. Press on “**ok**” to confirm (e.g., **B**)
8. Click on the button « **Save** »
9. Your sensor is now deleted.

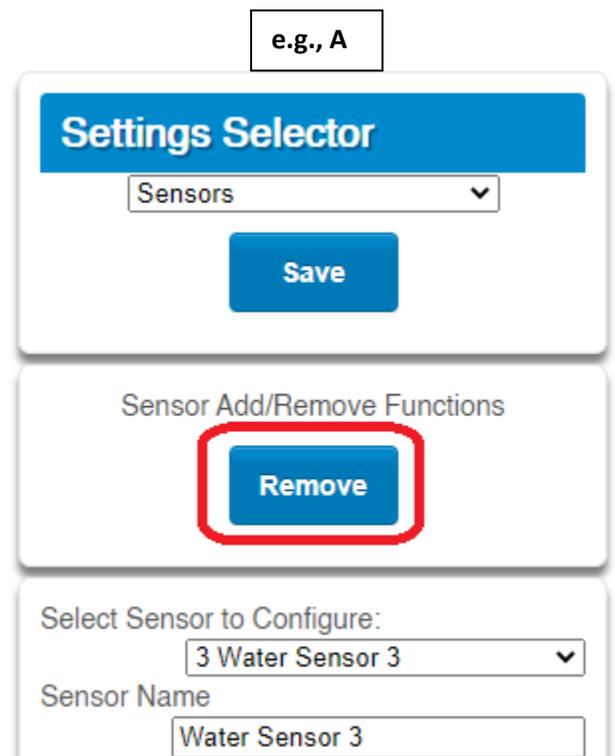

*Before deleting a sensor, make sure that it is not in alarm, otherwise when you are going to reconfigure another sensor, your system will continue the alarm (Exception: **Lost sensor**)

