

# How to automatically close the valve when the security system is armed away

#### Context

Several customers request that when they arm their security system, the Nowa water inlet valve closes automatically and reopens when the security system is disarmed.

The Nowa 360 has two inputs to receive dry contacts from the security system to perform this automation. This procedure will show you how.

# **Physical Configuration**

The "Input 1" terminal block will be used to receive the dry contact.

You must therefore pass your two wires from your PGM output of your security system and connect them in "Input 1". There is no polarity to respect.

## **Software Configuration**

- 1. Transfer wireless sensors # 1 & # 2 to the next available zones (ex: Wireless sensor # 1 becomes # 6)
- Configure sensor #1 with the following parameters (Fig. 1):
  - a. Sensor name: Security system
  - b. Sensor type: 5 Follower
  - c. Sensor Options: 19 Wired Water Sensor NC
- 3. Disable zone # 2 by changing the zone type and the zone option to deactivate. (Fig. 1)
- 4. Activate the hardwired zones in the system parameters (Fig. 2)
- 5. Create the automations (Fig. 3)

### Fig. 1 – Sensors Configurations

Select Sensor to Configure:	Sel
1 Security System 🗸	
Sensor Name	Ser
Security System	
Sensor Type	Ser
5 Follower 🗸	
Sensor Options	Ser
19 Wired Water Sensor NC 🗸	
Area Group	Are
1 Nowa 360 🗸 🗸	
Serial Number	Ser
0	50.


Select Sensor to Configure:
2 Disabled 🔻
Sensor Name
Disabled
Sensor Type
disabled 🔻
Sensor Options
disabled 🔻
Area Group
disabled 🔻
Serial Number
0



#### Fig. 2 – System options

System Options	
Panel Zone Doubling	
Panel Box Tamper	
System Sensor Tamper	
Disable Hardwired Sensors	
Sensor Inactivity	

#### Fig. 3 - Automations

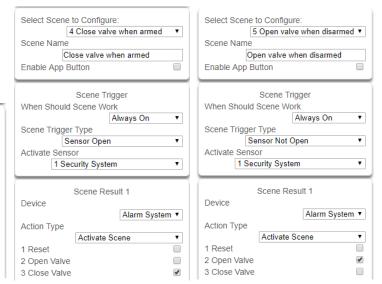

## www.nowasupport.com

#### nowa360.com

Specifications subject to change without notice. All trademarks are the property of their respective owners. Nowa 360 is powered by interlogix.