

How to add a new user

Context

The Nowa 360 system allows for more than 256 users and offers 4 simultaneous connections to the system.

By default, only two user accesses exist by default: User & User2

This procedure shows you how to configure additional users.

How to add a new user

ow to ddd d flew user	< Done		Cancel
 Open the mobile application Tap the 3 white lines in the upper left corner Press "users" Press the "+" button in the upper right corner Enter the user's first name in the "first name" field Enter the user's name in the "last name" field or leave it blank Enter the user's PIN (4 to 8 digits) in the "PIN" field Select the desired language for the user Select "custom" as the type of user Configure the user type Select "always active" for the schedule Select which type the user will be in "access" "Simplified Water" for general access to the Nowa 360 system "Full Water" for access to some general parameters as well as the home automation / security section "Safety + water" for a system used as a safety system "installer" for a user who must have access to all the configuration parameters of the system Press return Select the partition group (All sector is recommended) Define the start and end dates of user access in permissions dates Press "Done" in the upper left corner New login details should be displayed to you. 	User Number	5	
	First Name	Test	
	Last Name	2	
	User Name	Test 2	
	PIN	7875	
	Language	English	>
	User Type	Custom	>
	Area Group		~
	Permission Dates		>
	Custom		1
	Profile 1		
	Schedule	Always On	~
	Permission	Simplified Water	Ŧ
User Name:			

nowa360.com

Specifications subject to change without notice. All trademarks are the property of their respective owners.

PIN: 7875