

# NOWA 360

## How to force the Wi-Fi reconnection

### Context

Sometimes, the NOWA 360 system gets disconnected from the Wi-Fi network for no apparent reason.

If you didn't change any of the following: "Internet service provider, router, Wi-Fi name and password" then follow this procedure to force your NOWA 360 system to reconnect to the Wi-Fi.

### Procedure

1. Press the following buttons on the control unit to activate the Ethernet mode

**MENU** **9** **9** **9** **9** **9** **ENTER** **7**

2. Wait for the control panel to announce "Ethernet is on"
3. Press on the button **7** again to activate the Wi-Fi mode
4. Wait for the control panel to announce "Wi-Fi is on"
5. Press on **MENU** twice
6. The system should soon reconnect itself to the Wi-Fi network