



How to manually open the valve in case of a power outage?

By default, the Nowa valve closes during a power outage. Follow the following steps to open the valve manually:

- 1 Locate the hand control wheel on the Nowa valve and lift it up.
- 2 Turn the wheel clockwise until the valve is in the open position. If the valve begins to turn on its own, let it complete its rotation, then repeat step 2. **Do not push the caster back into its housing yet.**
- 3 **Once electrical power is restored**, push the caster back to its original position to return the valve to operation and to disengage the manual control.
- 4 Make sure your NOWA system can control the valve by opening/closing the valve from the control panel and observing the open/closed position indicator on the valve.

