



How to connect an accessory to a triangle detector

In context



The triangular detector allows you to connect different water leak detection accessories such as the perimeter cable , mini detector, water level float and more. This procedure will explain how to connect an accessory to this triangular detector.

Procedures

1




1. Open the triangular sensor using a flat screwdriver.

2



2. Pass the connection wire through the hole under the triangular sensor (**see the image on the right**).

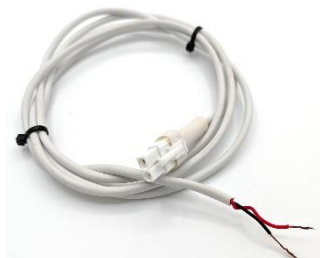

3. **Unscrew** the two terminals so you can join the red and black wires together.

3

4. Insert the **black wires** to the **first terminal block (GND)** and the **red wires** to the **second** .

5. **Screw in the terminal blocks** and **pull on the wires** to make sure they are secure .

6. **Final assembly** of a triangular detector. Ready to connect a perimeter cable to the end of the connector circled by a blue circle.

